

Centre spike – centering aid for drilling

Article number : 34004934

How to use ?

- You can only use the centre spike for drills with connection 5/4" (not with connection 1/2")
- You simply put the centre spike into the drilling machine.
- Indicate the centre point where you want to drill and here you put the centre spike
- You press the centre spike (the spike consists of a compression spring) and then the drill will push against the drilling surface.
- Just drill 1 or 2 cm in the material you want to process (you can only drill dry because the centre spike comes there where normally the water comes out)
- You have now drilled a center and you can remove the centre spike from the drilling machine
- You put the drill into the center again and the drill will now be stuck in the core and will not move anymore
- You can now open the water supply and start drilling the hole

