

DP series

Multifunctional tanks with fixed butyl diaphragm and insulated protective sheath







MULTIFUNCTIONAL TANKS WITH FIXED BUTYL DIAPHRAGM AND INSULATED PROTECTIVE SHEATH


(5 - 500 LITRES)






DP - CE 5 - 35



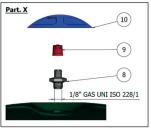



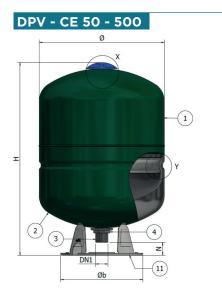

CE certified product

₽

For drinking water



For sanitary hot water



For heating systems

藥

For air conditioning systems



For pressurisation systems



Water hammer arrestor

Multifunctional tanks with fixed-bladder and protective sleeve

Multifunctional sanitary vessels with fixed bladder are designed to be fitted both as expansion tanks into sanitary systems, suitable to absorb the water expansion volume generated by a changing temperature, as well as pressure tanks for cold water sanitary systems.

Both applications are possible thanks to the protective sheath with <u>patented</u> crimping system that ensures the protection against corrosion of the inner surface of the tank.

In your Domestic Hot Water system install Elbi expansion tanks in the cold water supply pipe (do not install in the hot water drawoff pipe).

Characteristics:

- Min./max. working temperature: -10° / +99°C
- Max working pressure: 10 bar
- Pre-charge pressure: 2,5 bar
- Hydrostatic test pressure: 14,3 bar
- Fixed alimentary diaphragm in butyl
- Alimentary protective sheath in butyl
- Stainless steel connection with hexagonal nut
- Double metallic crimp
- Long lasting epoxy powder paint, green RAL 6005;
- NO MAINTENANCE

Reference standard:

- Declaration of conformity to essential safety requirements specified in 2014/68/UE Directive;
- CE approved

WARRANTY: 5 YEARS

| | | Cap. | Diam. Ø | Н | Øb | Ν | DN1 | |
|-----------|---------|--------|---------|-------|-----|-----|------------|--|
| MODEL | CODE | litres | mm | mm | mm | mm | mm | |
| DP - 5 | A2C2L11 | 5 | 205 | 225 | - | - | 3/4" GAS | |
| DP - 8 | A2C2L16 | 8 | 205 | 300 | - | - | 3/4" GAS | |
| DP - 11 | A2C2L19 | 11 | 270 | 300 | - | - | 3/4" GAS | |
| DP - 18 | A2C2L24 | 18 | 270 | 410 | - | - | 3/4" GAS | |
| DP - 24 | A2C2L27 | 24 | 320 | 355 | - | - | 1" GAS | |
| DP - 35 | A2C2L31 | 35 | 400 | 390 | - | - | 1" GAS | |
| DPV - 50 | A2C2L34 | 50 | 400 | 585 | 330 | 68 | 1" GAS | |
| DPV - 80 | A2C2L37 | 80 | 400 | 820 | 330 | 68 | 1" GAS | |
| DPV - 100 | A2C2L38 | 100 | 500 | 775 | 330 | 67 | 1" 1/4 GAS | |
| DPV - 150 | A2C2L43 | 150 | 500 | 1.005 | 330 | 67 | 1" 1/4 GAS | |
| DPV - 200 | A2C2L47 | 200 | 600 | 1.065 | 485 | 107 | 1" 1/4 GAS | |
| DPV - 300 | A2C2L51 | 300 | 650 | 1.240 | 485 | 98 | 1" 1/4 GAS | |
| DPV - 500 | A2C2L55 | 500 | 775 | 1.400 | 485 | 108 | 1" 1/4 GAS | |

HOW TO SIZE A MULTI-FUNCTIONAL TANK

The multifunctional tanks can be used either as expansion tanks for heating and DHW systems, being able to absorb the expansion due to the rise in temperature, or as autoclaves in cold water systems.

SIZING AS AN EXPANSION TANK

The general formula for sizing of an expansion tank is:

$$V = \frac{V_0(k_f - k_i)}{1 - (P_1 / P_0)}$$

Where:

- V is the total volume of the expansion tank in liter
- $\boldsymbol{V}_{\!\scriptscriptstyle O}$ is the volume of fluid in the system, in liter
- $k_{\rm f}$ is the fluid's expansion coefficient at the maximum allowable temperature in the plant (request the table of expansion coefficients)
- k, is the fluid's expansion coefficient at plant's starting temperature (request the table of expansion coefficients). If such temperature is not known, consider 10 °C as a reference
- $\boldsymbol{P}_{\!\scriptscriptstyle 1}$ is the absolute air precharge pressure in bar
- P, is the absolute set pressure of the plant's safety valve in bar. Such pressure is to be reduced by an amount equal to the difference in hydrostatic height between the safety valve and the expansion tank

IMPORTANT! Air precharge pressure must always be checked and properly set at the time of installation. Its value depends on the operating pressure of the plant. Italian "Raccolta R" prescribes a precharge pressure at least equal to the hydrostatic pressure acting on the expansion tank in cold conditions, but in any case no less than 1,5 bar absolute (equal to 0,5 bar relative).

SIZING AS AN EXPANSION TANK


The general formula for autoclave sizing is:

$$V = 16.5 \times \frac{Q \text{ max}}{A} \times \frac{P_s \times P_a}{P_s - P_a} \times \frac{1}{P_a}$$

Where

- $\ensuremath{\mathsf{V}}$ is the total volume of the autoclave, in liter
- Q max is the maximum flow rate of the pump, or the maximum consumption of the plant, in litrer per minute
- P_s is the pump's absolute shut-off pressure in bar P_s is the pump's absolute start-up pressure in bar
- P^s is the pump's absolute start-up pressure in bar
 P^a is the autoclave's absolute air precharge pressure in bar
- A is the number of pump's start-up/shut-off cycles in an hour (in case this parameter is unknown a tentative value of 12÷15 cycles is suggested)

IMPORTANT! Air precharge pressure must always be checked and properly set at the time of installation. Its value depends on the operating pressure of the plant. A recommended value is 0,5 bar below the pump start-up pressure Pa.

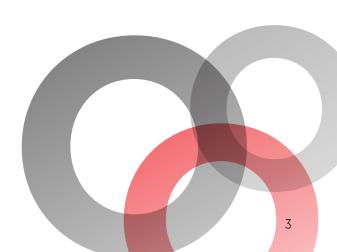



39462 V3000 - 11/20

Elbi S.p.A. Headquartes and main plant:

C.P. 103 - Via Buccia, 9 35010 LIMENA (PD) ITALY

Tel +39-049-8840677 Fax +39-049-8841610

Plant and warehouse in Modugno:

Via delle Magnolie, 19 70026 MODUGNO (BA) ITALY

Tel +39-080-5316843 Fax +39-080-5316822

Elbi of America, Inc Houston, TX 77032

Tel. 001 (713) 674-2900 Fax 001 (713) 674-2982 www.elbi.net

Brea, CA 92821 Tel. 001 (714) 674-0590

www.elbi.it info@elbi.it

