

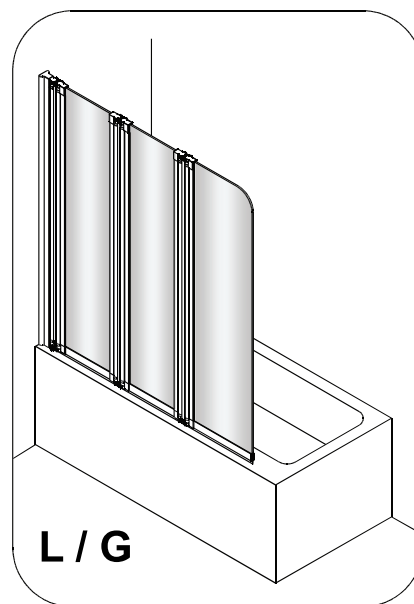


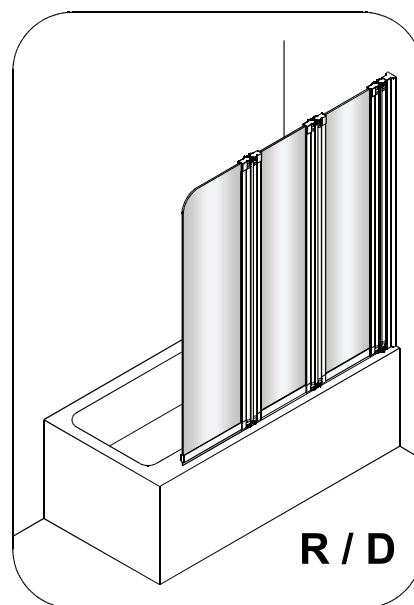


MONTAGEHANDLEIDING
INSTRUCTION DE MONTAGE
MONTAGEANLEITUNG

PANNELLO STAR


224122
224001

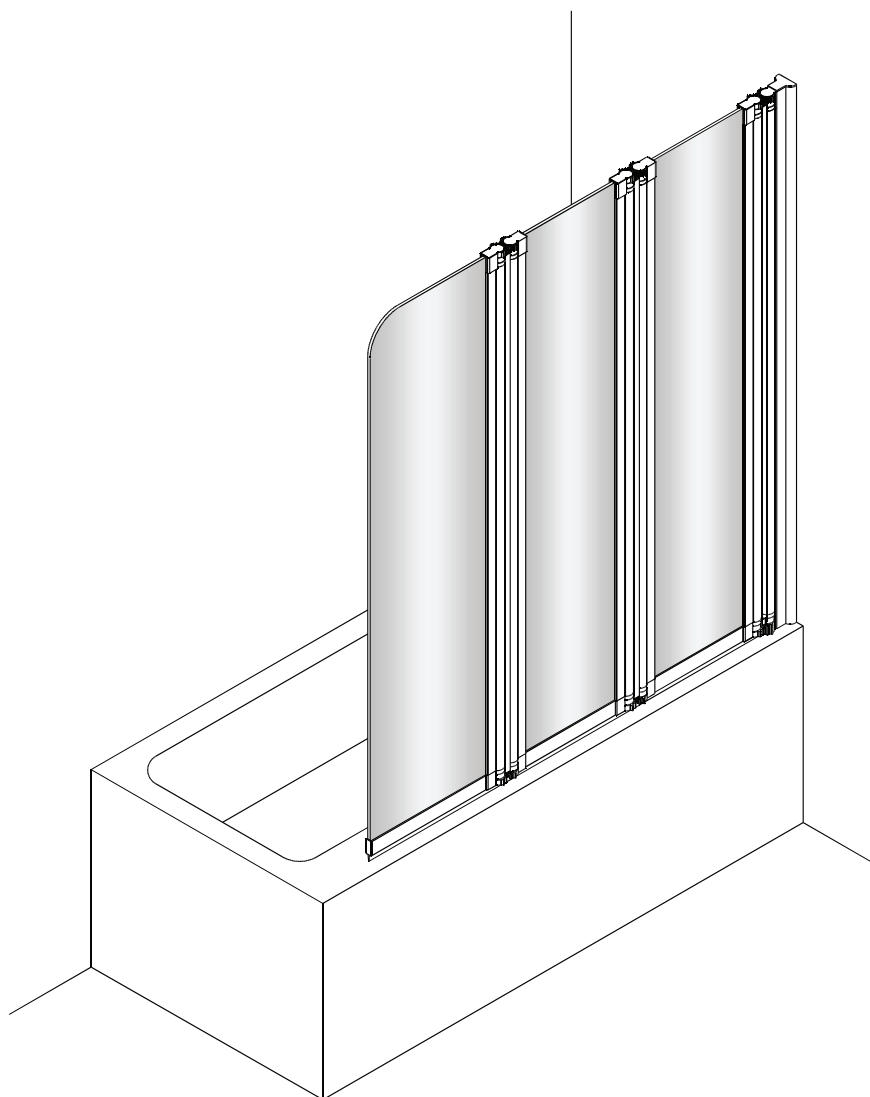

BADWAND 3-delig / PAROI DE BAIN 3-volets / BADEWANNENFALTWAND 3-teilig

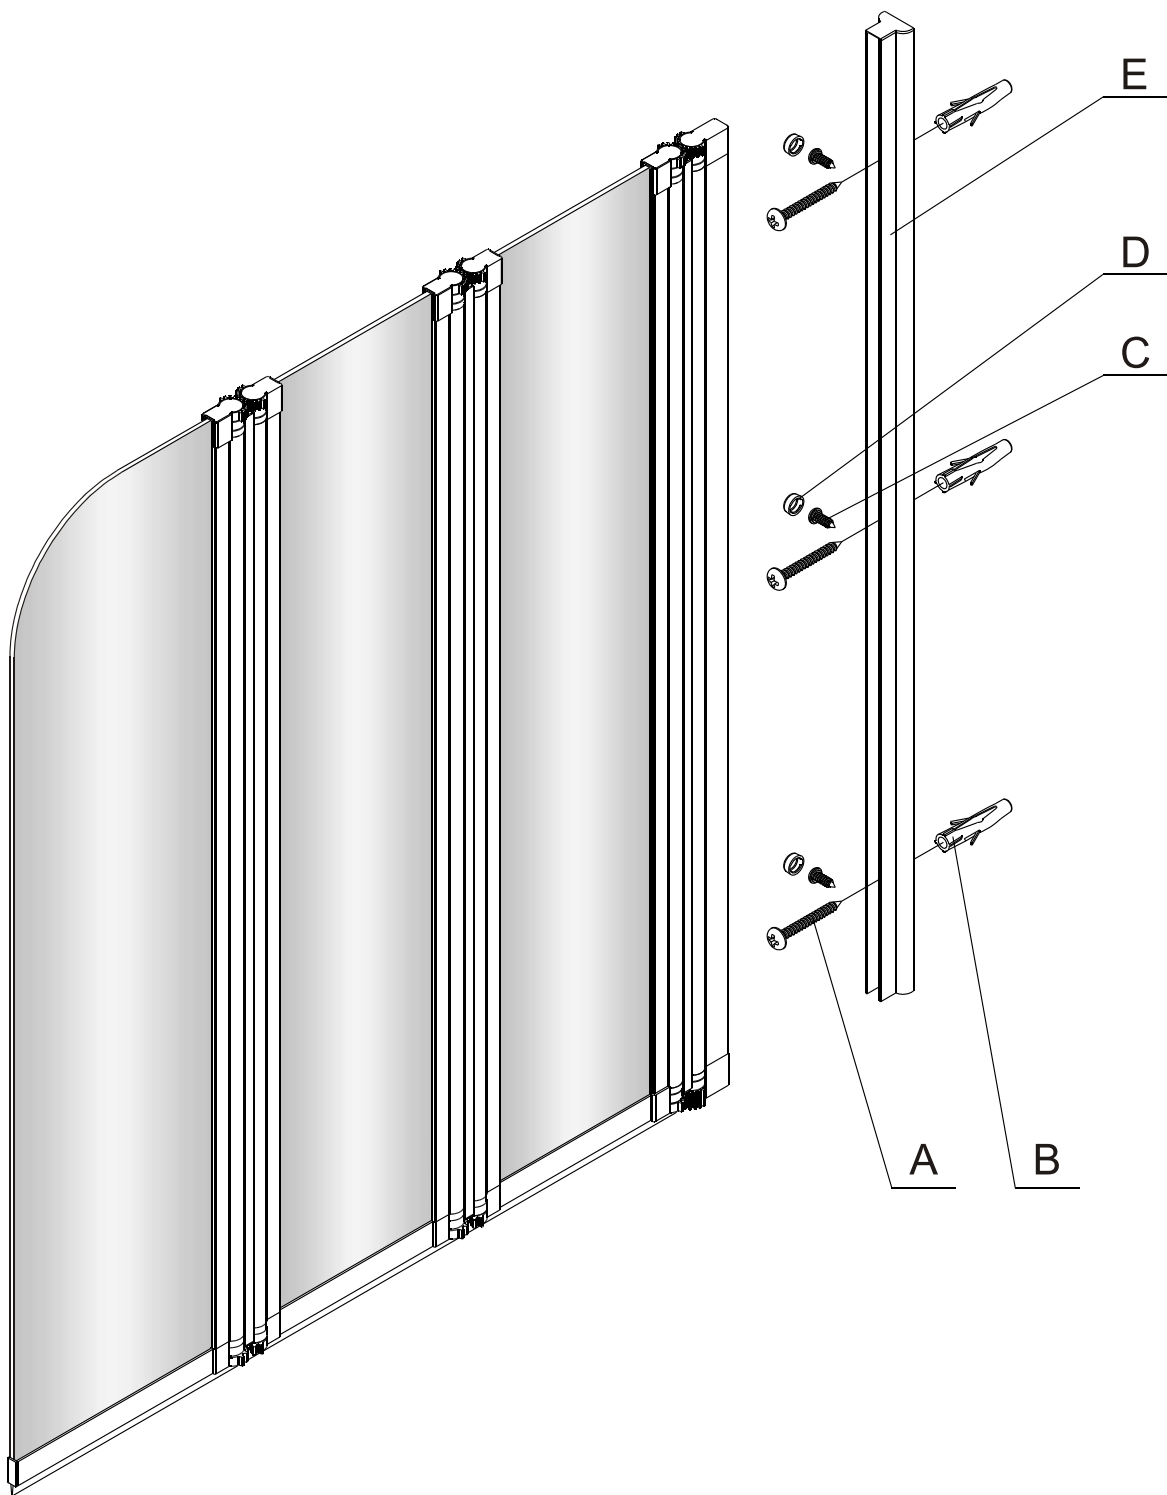

A



ST4x40

x3

B



x3

C



ST3.5x10


x3

D




x3

E







x1

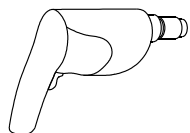

Ø 6.0 mm

Ø 2.8 mm









LH




RH




1

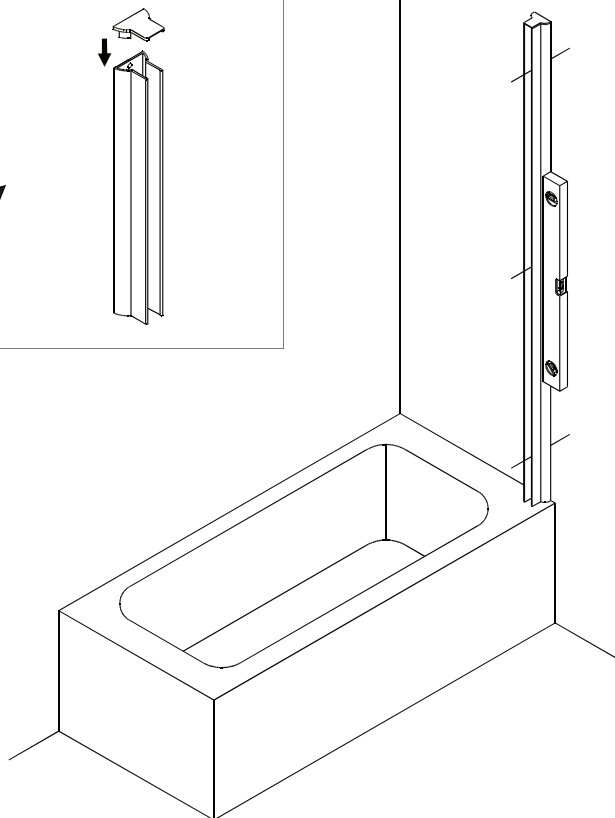


1a

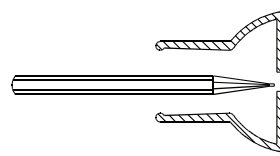


1b

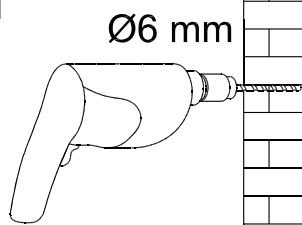




1c

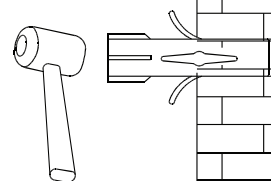


1d

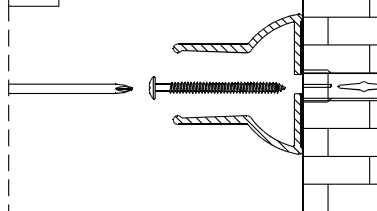




2

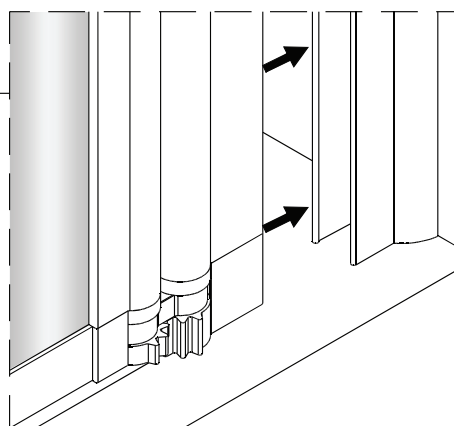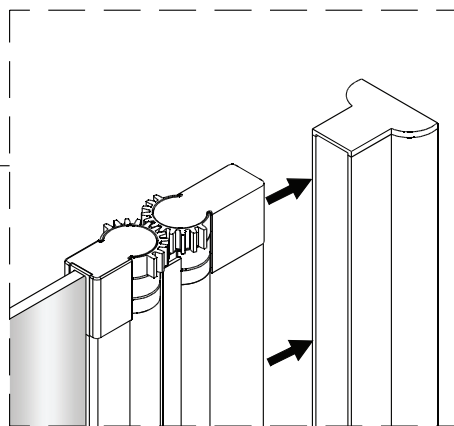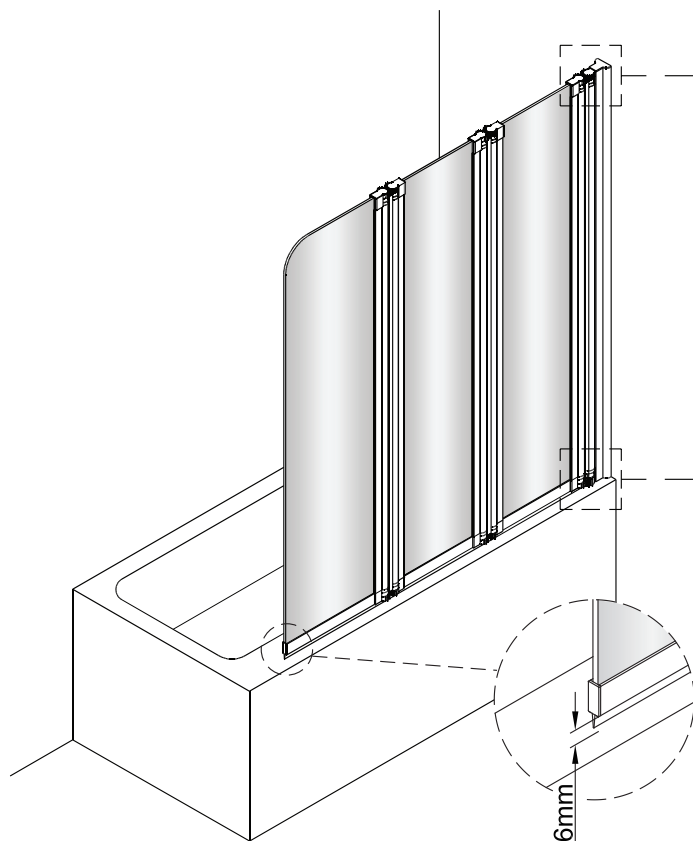

3

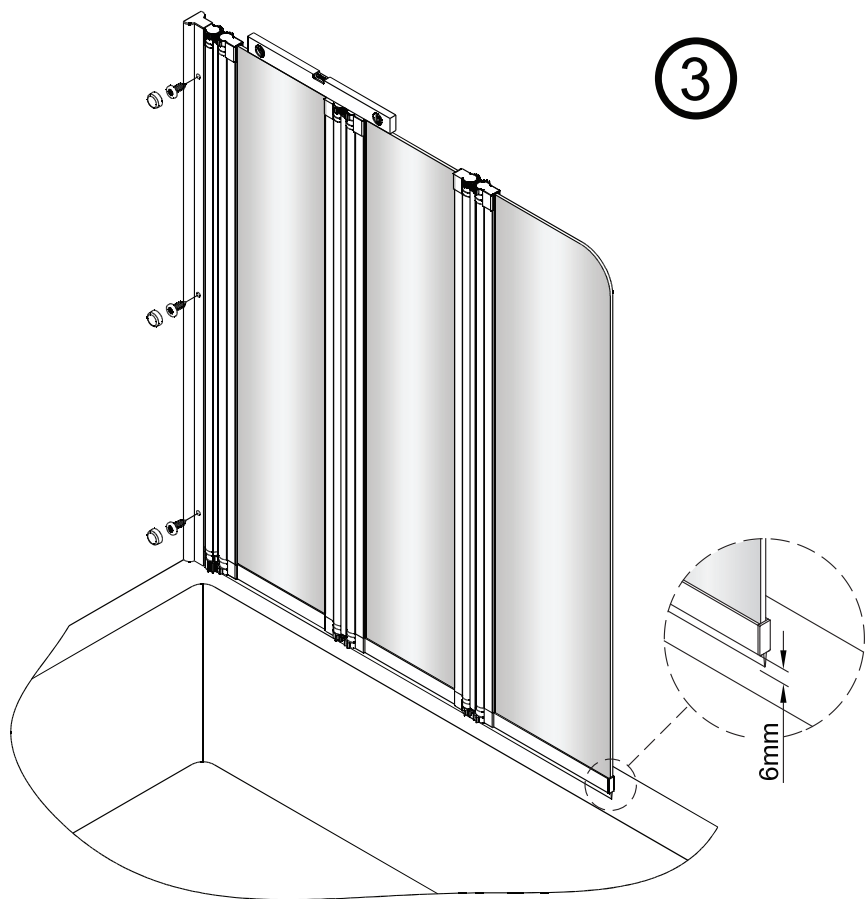

Ø2.8mm

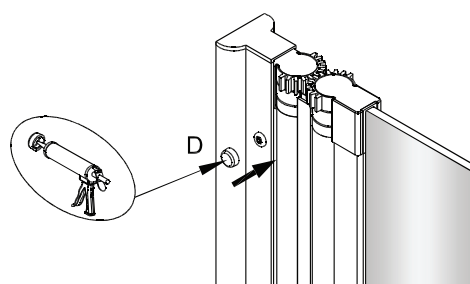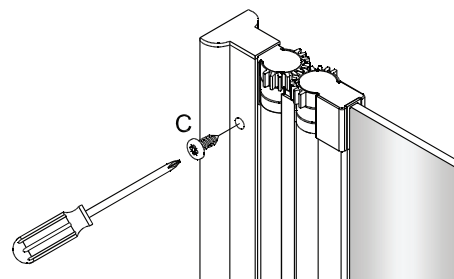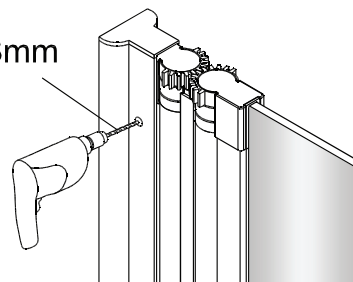

4

