

MiniPlus FF06

Rinsable fine filter

APPLICATION

Rinsable MiniPlus FF06 fine filters ensure a continuous supply of filtered water. The fine filter prevents the ingress of foreign bodies, for example rust particles, strands of hemp and grains of sand and thus reduces the probability of corrosion. Sediment collected at the bottom of the filter bowl can simply be removed by rinsing the filter.

Compact in size, these filters were designed to fit where space is limited.

APPROVALS

- DVGW

SPECIAL FEATURES

- Simple assembly
- Filtered water supplied even during reverse rinsing
- Shock resistant clear synthetic material filter bowl enables easy checking of filter contamination
- Filter and complete filter bowl are replaceable
- Body with female and male threads
- All materials are ACS approved
- All materials are KTW approved
- Approved by TÜV LGA for low noise, Group 1 without limitations




TECHNICAL DATA

Media	
Medium:	Drinking water
Connections/Sizes	
Connection sizes:	1/2" - 1 1/4"
Pressure values	
Max. operating pressure:	16.0 bar
Operating temperatures	
Max. operating temperature medium:	40 °C
Specifications	
Installation position:	Horizontal with filter bowl downwards

Note: The filter is constructed for drinking water installations. In case of a process water application the filter has to be proven individually.

CONSTRUCTION

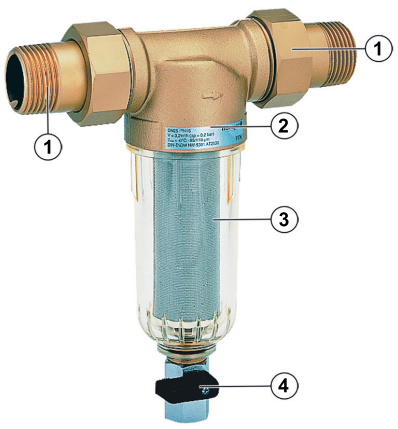Overview		Components	Materials
	1	Threaded connections (option AA)	Brass
	2	Housing with female and male threads, without threaded connection	Dezincification resistant pressed brass
	3	Fine filter in clear filter bowl	Stainless steel, shock-resistant, transparent synthetic material filter bowl
	4	Ball valve	Brass (Ball Valve body), Stainless steel (ball), Plastic (handle)
	Not depicted components:		
		Double wring wrench	Plastic

METHOD OF OPERATION

The fine filter is composed of a body and a rinsable fine filter insert.

During normal operation, water flows through the filter mesh to the body outlet. To rinse the filter, the ball valve is opened which discharges the dirt particles. A continuous supply of filtered water is available also during the rinse cycle.

TRANSPORTATION AND STORAGE


Keep parts in their original packaging and unpack them shortly before use.

The following parameters apply during transportation and storage:

Parameter	Value
Environment:	clean, dry and dust free
Min. ambient temperature:	5 °C
Max. ambient temperature:	55 °C
Min. ambient relative humidity:	25 % *
Max. ambient relative humidity:	85 % *

*non condensing

Installation Example

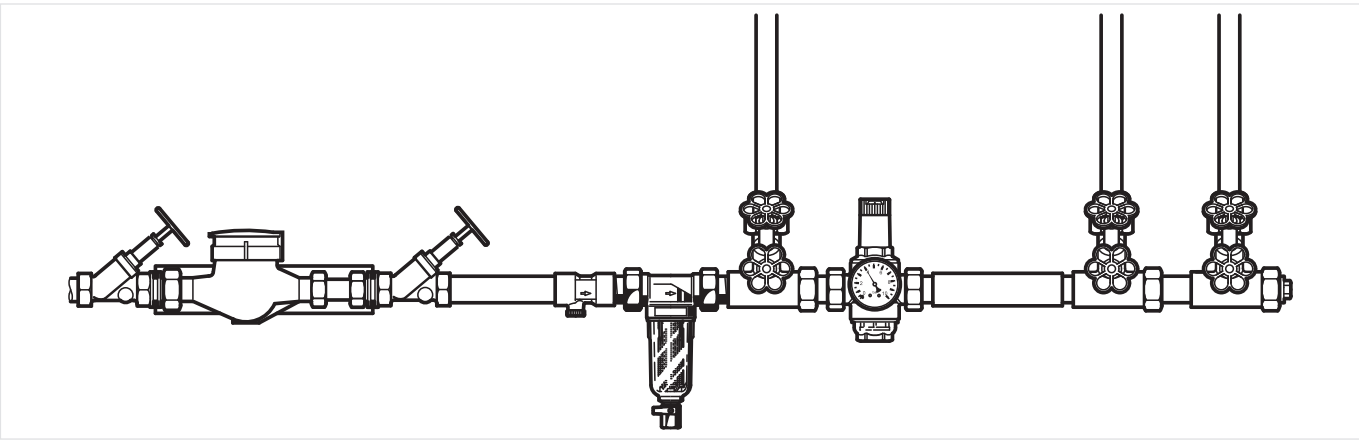


TECHNICAL CHARACTERISTICS

kvs-Values


Connection sizes:	15	20	25	32
k_{VS} -value (m ³ /h):	1.8	3.2	9.5	9.5

Pressure drop characteristics

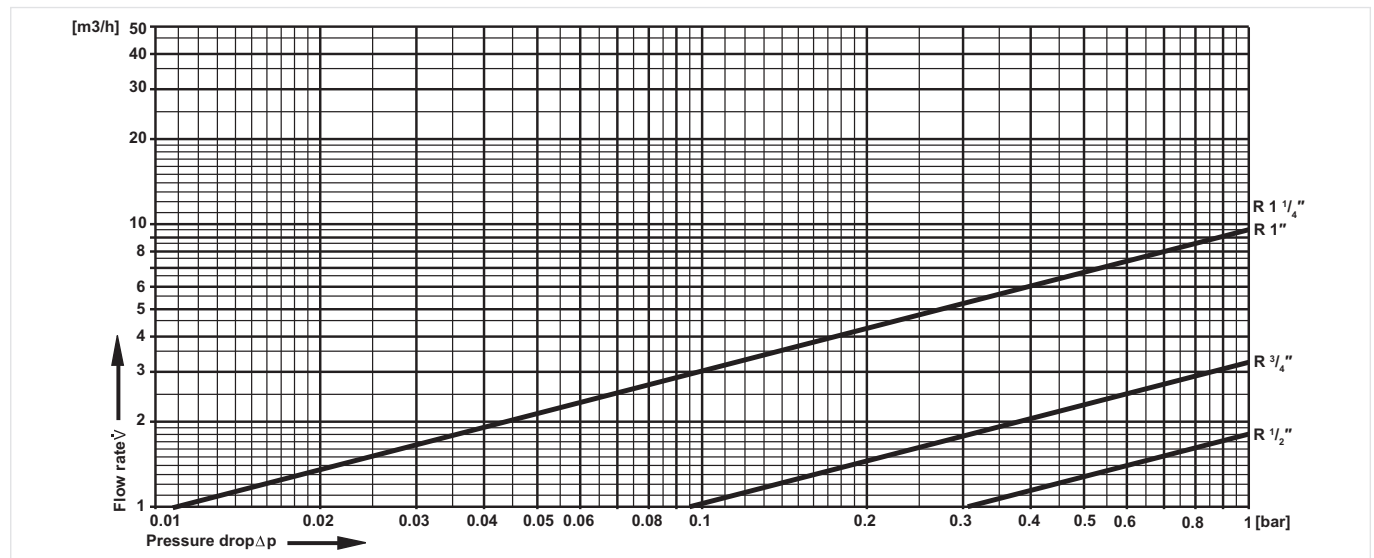

DIMENSIONS

Overview

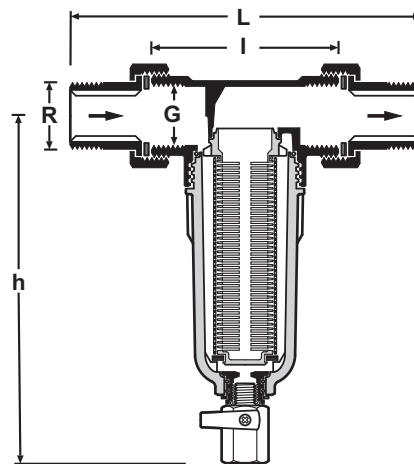

Parameter		Values			
Connection sizes:	R	1/2"	3/4"	1"	1 1/4"
Internal threads:	G	1/2"	3/4"	1"	-
Weight:	kg	0.7	1.0	1.3	1.5
Dimensions:	L	140	158	179	197
	l	80	90	100	105
	h	158	180	180	180
Flow value at $\Delta p=0.5$ bar:	m ³ /h	1.27	2.27	6.7	6.7
DVGW registration number:		NW-9301CM0399		-	-

Note: All dimensions in mm unless stated otherwise.

ORDERING INFORMATION

The following tables contain all the information you need to make an order of an item of your choice. When ordering, please always state the type, the ordering or the part number.

Options

The filter is available in the following sizes: 1/2", 3/4", 1" and 1 1/4".



- standard
- not available

		FF06-...AA	FF06-...EA
Connection type:	Threaded male connections, filter mesh size 100 µm	•	-
	Without connections, filter mesh size 100 µm	-	•

Note: ... = space holder for connection size

Note: Ordering number example for 1" and type AA valve: FF06-1AA


Accessories

	Description		Dimension	Part No.
	VST06B	Connection set		
		Solder connections		
			1/2"	VST06-1/2B
			3/4"	VST06-3/4B
			1"	VST06-1B
	ZR06F	Double ring wrench		
		For removing filter bowl		
			1/2" - 1 1/4"	ZR06F

Spare Parts

MiniPlus FF06 Fine Filters from 1997 onwards

Overview

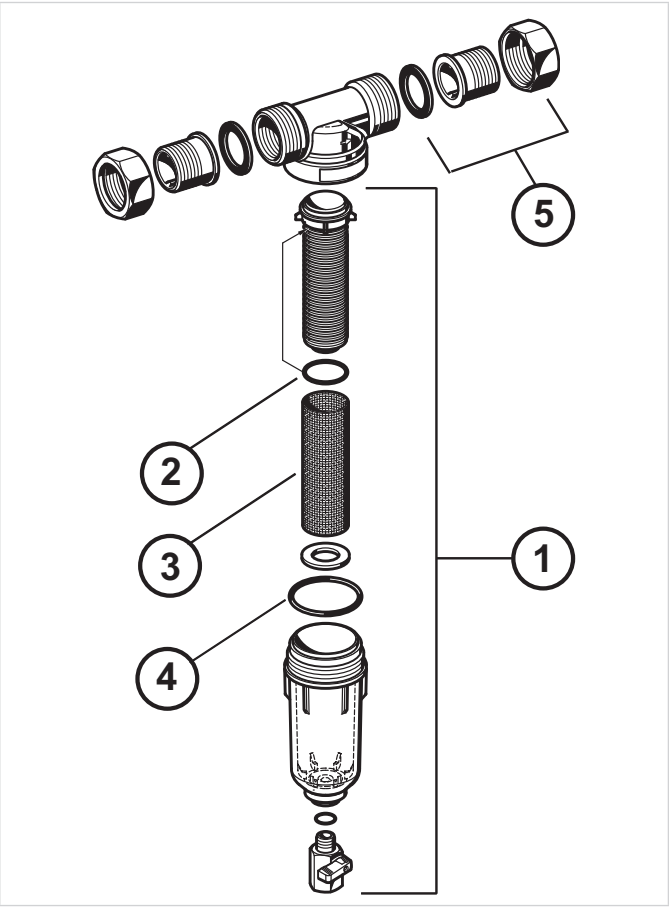

	Description	Dimension	Part No.
1	Clear filter bowl with sieve 100 µm and mesh carrier	1/2"	KF06-1/2A
		3/4" - 1 1/4"	KF06-1A
2	O-ring set for mesh carrier (10 pcs.)	1/2"	0903127
		3/4" - 1 1/4"	0903128
3	Replacement sieve (5 pcs.)	100 µm	1/2"
		100 µm	3/4" - 1 1/4"
		50 µm	1/2"
		50 µm	3/4" - 1 1/4"
4	O-ring set for filter bowl (10 pcs.)	1/2"	0901246
		3/4" - 1 1/4"	0901499
5	Connection set threaded connection	1/2"	VST06-1/2A
		3/4"	VST06-3/4A
		1"	VST06-1A
		1 1/4"	VST06-1 1/4A

Ademco 1 GmbH

Hardhofweg
74821 MOSBACH
GERMANY
Phone: (49) 6261 810
Fax: (49) 6261 81309
<http://ecc.emea.honeywell.com>
<http://ees.honeywell.com>

Manufactured for and on behalf of the
Pittway Sarl, La Pièce 16, 1180 Rolle, Switzerland
by its Authorised Representative Ademco 1 GmbH
EN0H-1115GE23 R0918
Subject to change
© 2018 Ademco 1 GmbH

